



the sort-it-out

Caster Installation


LET'S GET ROLLING!

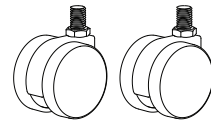

2X Casters
without brake lever

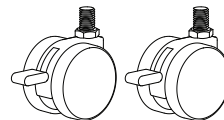


2X Casters
with brake lever

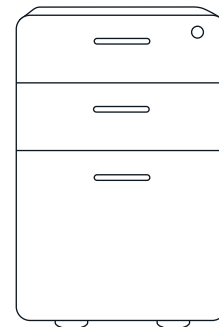

Works with any of
our Stow Cabinets


① I'M FLOORED

Spread a blanket on the floor to avoid scratching the finish. Set your File Cabinet on its side on top of blanket.

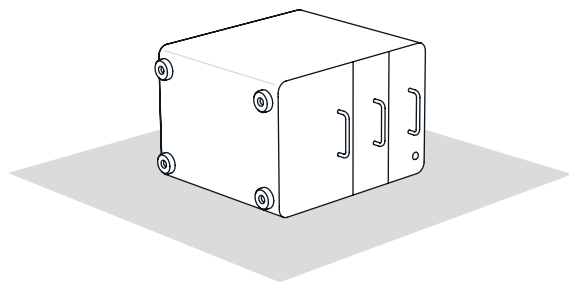

② SHOE CHANGE


Remove the glides currently installed at the foot of your cabinet. Spin glides counterclockwise, to the left, to remove. (Remember: righty tighty; lefty loosey.)

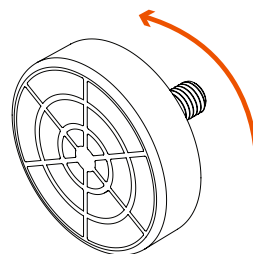

In the spirit of really getting it together, we recommend gathering the glides and keeping them safely stored together for future use.

③ CAST AWAY

Replace glides with casters, screwing each caster all the way in. Make sure they're tight! We like to put the locking casters in front, but you do whatever feels right.

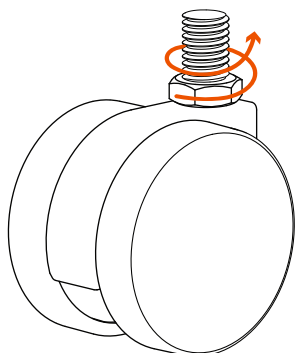

④ ROLL HAPPY!

Now, go file in style.

